

# HOME DECORATORS C O L L E C T I O N


BF-25182 MARTHA STEWART LIVING KIDS CRAFT STOOL 15"Hx13"Wx13"D

INV#19042

## ASSEMBLY INSTRUCTIONS




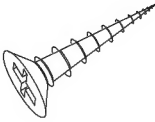



Made In China

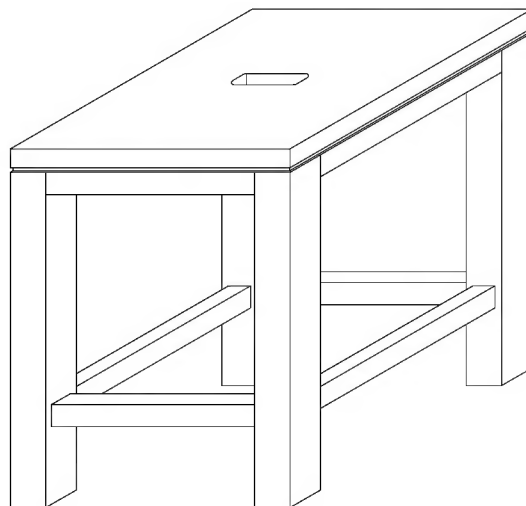THIS ITEM MUST BE ASSEMBLED BY AN ADULT




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

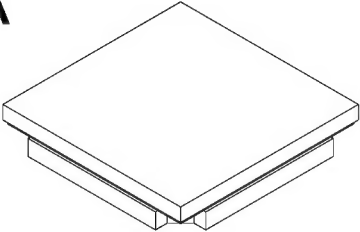IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


PARTS LIST		
<b>A</b>  <p>TOP PANEL-1PC</p>	<b>B</b>  <p>FEET-4PCS</p>	<b>C</b>  <p>PANELS-4PCS</p>
<b>D</b> <p>8mm × 1-1/2"</p>  <p>SCREWS-16PCS</p>	<b>E</b> <p>13mm × 1-3/4"</p>  <p>BOLTS-4PCS</p>	<b>F</b>  <p>ALLEN WRENCH-1PC</p>
<b>G</b>  <p>DOWELS-8PCS</p>		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

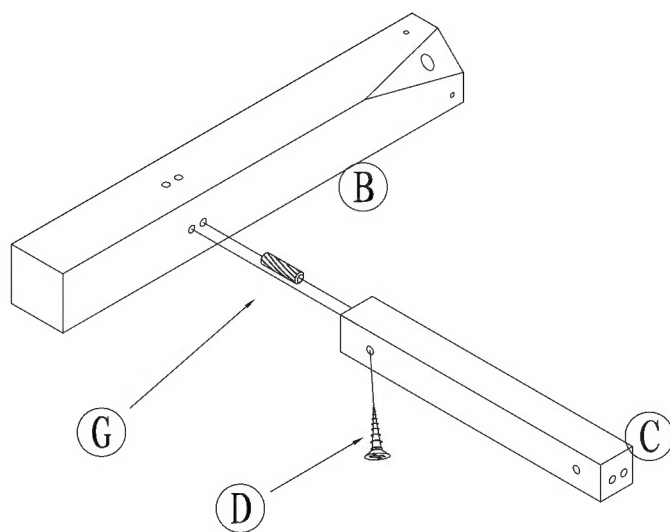


1). ASSEMBLE THE PANEL (C).

- INSERT 1 DOWEL (G) INTO THE HOLE IN THE FOOT (B).
- ATTACH THE PANEL (C) TO FOOT (B) USING 1 SCREW (D).

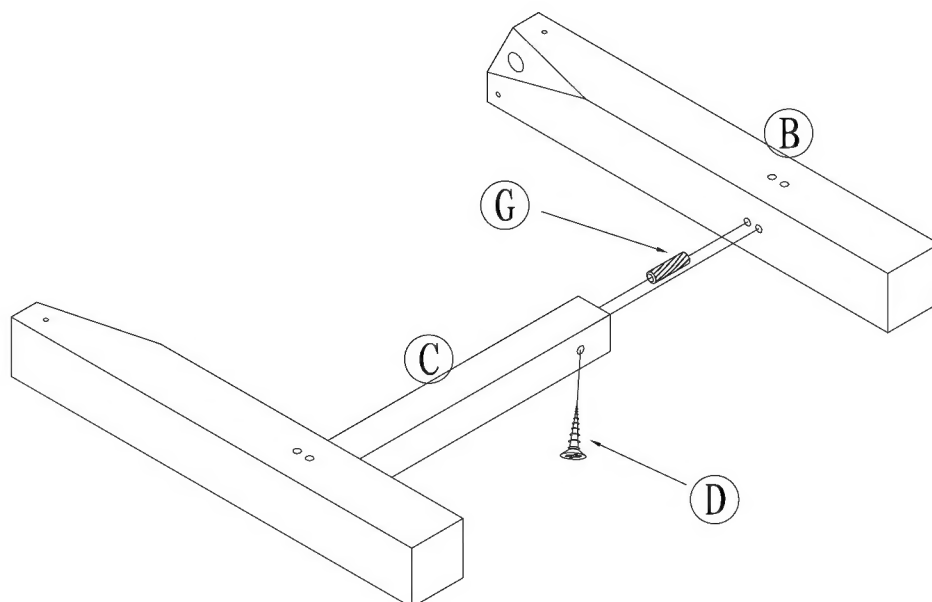


2). ASSEMBLE THE PANEL (C).

- INSERT 1 DOWEL (G) INTO THE HOLE IN THE FOOT (B).
- ATTACH THE PANEL (C) TO FOOT (B) USING 1 SCREW (D).

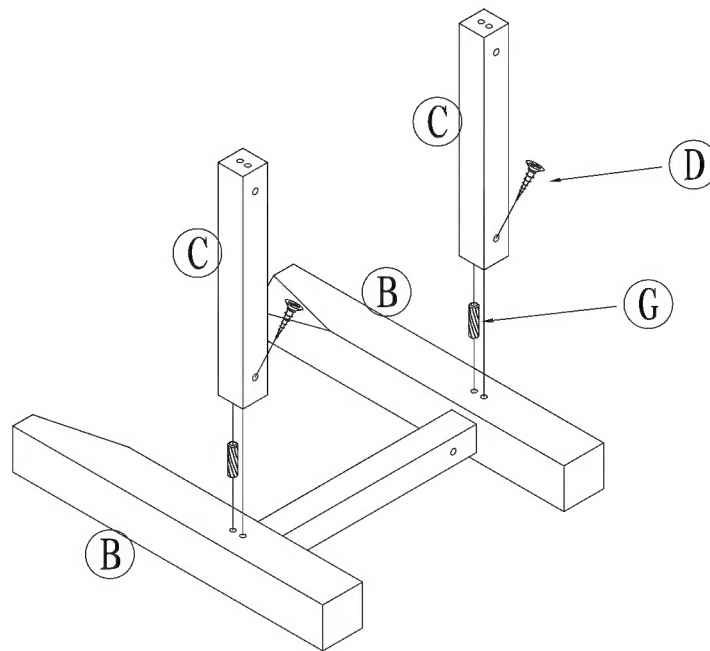



3). ASSEMBLE THE PANELS (C).

- INSERT 2 DOWELS (G) INTO THE HOLES IN THE FEET (B).
- ATTACH THE PANELS (C) TO FEET (B) USING 2 SCREWS (D).

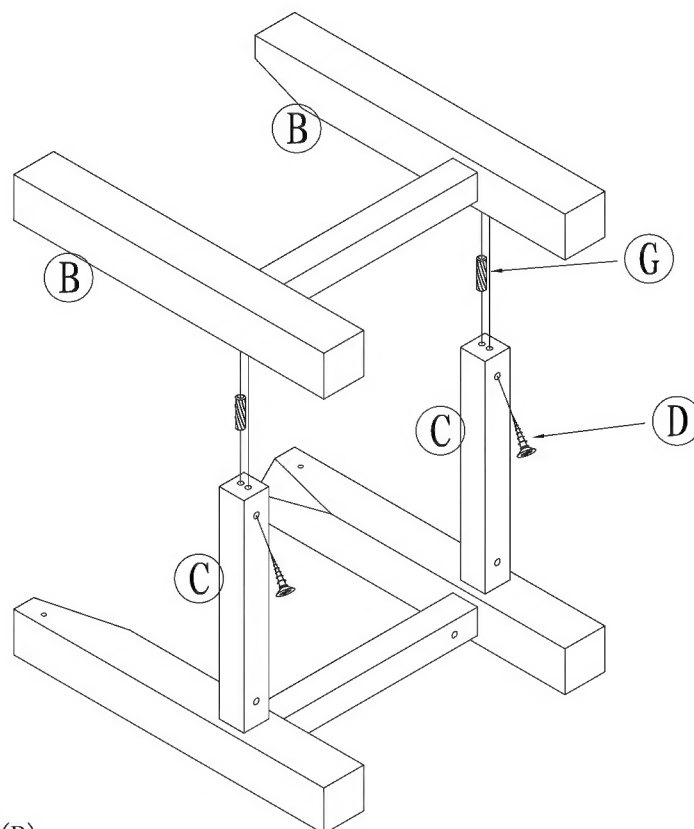

4). ASSEMBLE THE FEET (B).


- INSERT 2 DOWELS (G) INTO THE HOLES IN THE PANELS (C).
- ATTACH THE FEET (B) TO PANELS (C) USING 2 SCREWS (D).

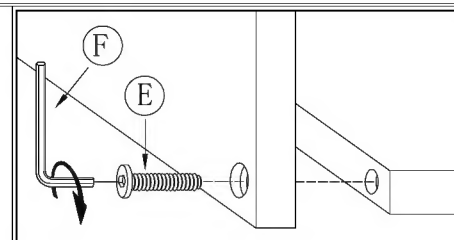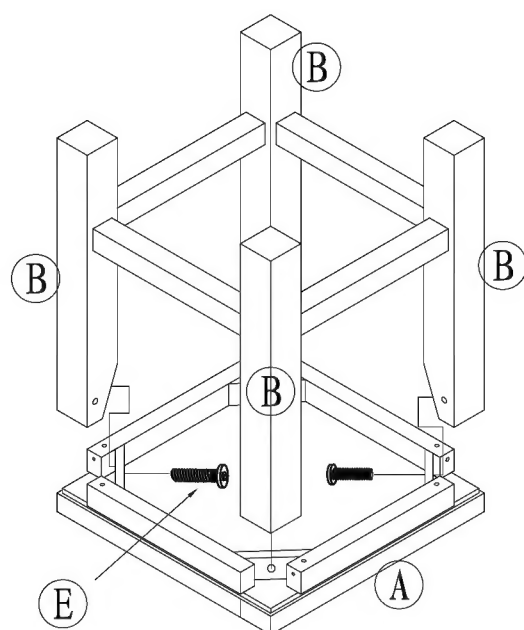

HOW TO USE THE ALLEN WRENCH

5). ASSEMBLE THE TOP PANEL (A).

- ATTACH THE FEET (B) TO TOP PANEL (A) USING 4 BOLTS (E).

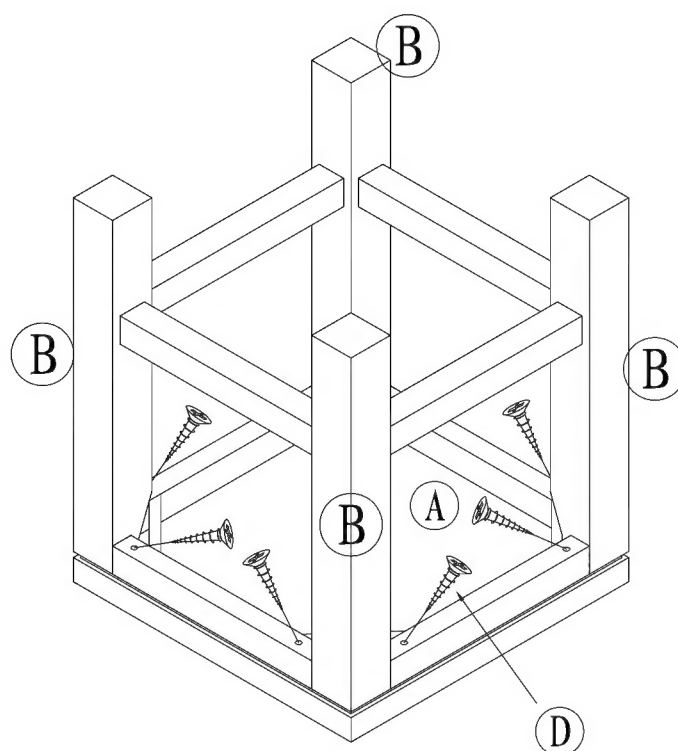

6). ASSEMBLE THE FEET (B).

- ROTATE 8 SCREWS (D) INTO THE HOLES IN THE TOP PANEL (A).